

Manual of Bluetooth Control Receiver XH-092B

Features

Thanks to Bluetooth receiver, you can open your gate, garage door, or barrier from your smartphone, rf remote control, even keyless entry by USB card. It is important that your smartphone has a Bluetooth connection, although this is already standard on today's phones.

Specifications

- (1) Working voltage: DC 8-24V
- (2) Working current: 35±5mA
- (3) Output mode: OC output
- (4) Bluetooth control distance: 30m in an open area
- (5) 2.4G USB control distance: 5m in car
- (6) RF control distance: 80-100m in an open area
- (7) RF frequency: 433.92Mhz
- (8)Memory capacity: 512 pcs card and rf remote control


Instruction

1. Connection of the Bluetooth control receiver device.

- (1) Working voltage: DC 8-24V
- (2) Black: connect with " - "
- (3) Green: Channel 1 output
- (4) White: COM
- (5) Yellow: Channel 2 output

-1-

Note: User can connect green and yellow wires with the gate opener controller's open and close terminal, and white wire connect with COM terminal. Otherwise, if the gate opener is a single button control mode, it only needs to connect with the green and white wire.

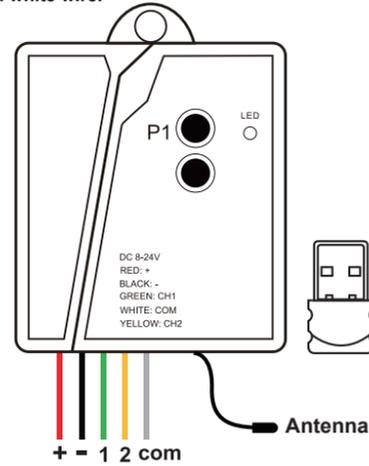

-2-

2.Download the Xhouse IOT APP

- Scan the QR code (as follows) to get the APP, download and install it.
- You can also try to search XHouse IOT on the Google play store or APP Store to download.
- Register and login into account.




FOR Android & IOS



-3-

3.Adding device

- Please press the " + " on the right top corner. And then choose " Bluetooth Device ", and press " BLE Remote ".

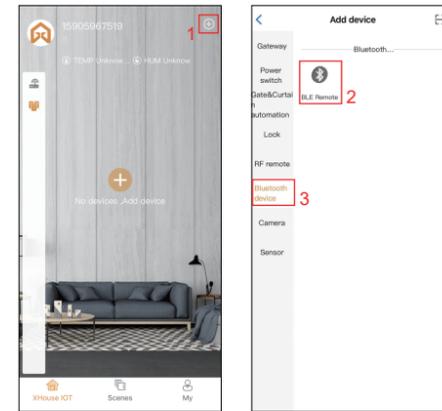


-4-

- Choose your Bluetooth device, and press the" Add ". (The bluetooth device mode number is XHOUSE_092BLE_XXXXXX, XXXXXX is its serial number)



-5-


- The device was added successfully as follow. Press the " BLE Remote ", user can click the " ⚙️ " to modify the " device name " and " device key name ".

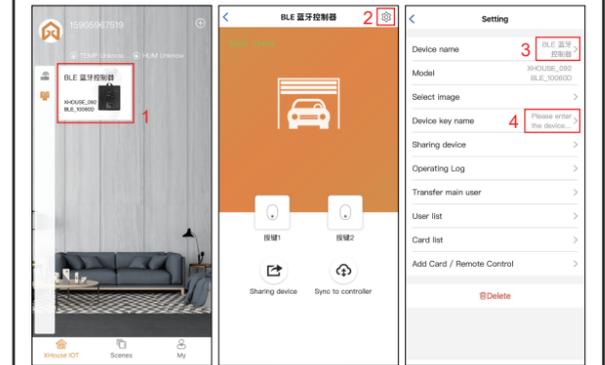

-6-

4.Add card or remote control

- The administrator can add extra cards or remote controls for other users, and set the deadline.

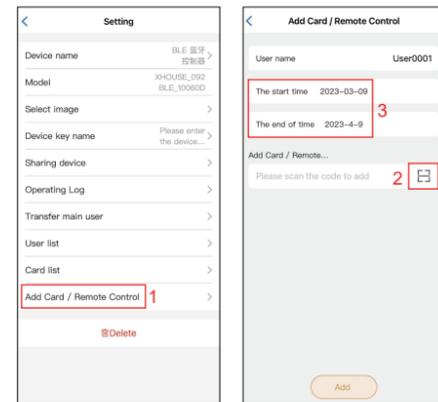

-7-




Note: If the Synced showed red color, means you don't sync the card or remote to the app successfully, please press the red color " Sync " on the bottom.

-8-


5.Sharing device

Note: New users request to download the app first.

- Administrator needs to open the app, choose the Bluetooth device, click the " ⚙️ ", click "sharing device", it will create a QR code.

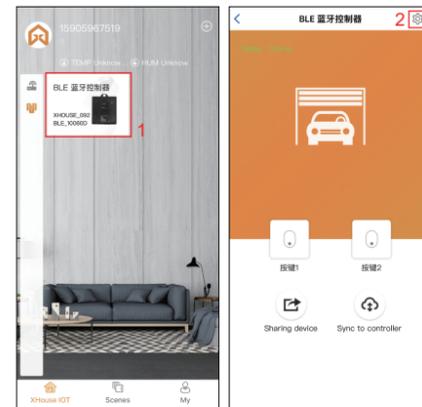


-9-

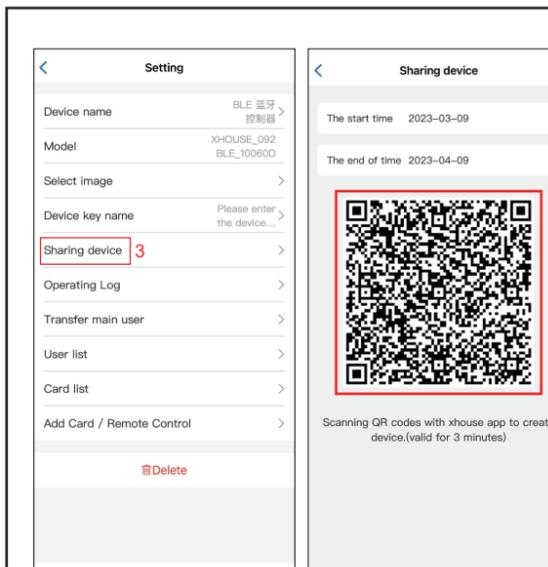

-10-

- New users need to open the app, click the " + " button, enter adding device mode, click the " ⚙️ " button, choose the " Scan code share ", scan the QR code from administrator's app.

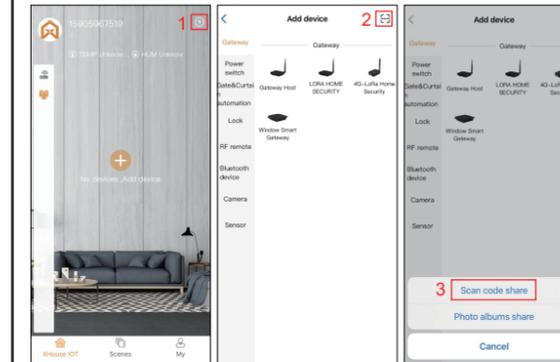

-11-

6.How to operate your gate opener

- By smartphone, the user needs to open the App, choose BLE device, press the buttons to operate the gate opener.
- By USB card, users need to drive their car and arrive at the front of the gate within 5m, the gate opener will be open automatically. If your gate opener has an auto-close function or you already connect the Channel 2 with gate opener controller's close terminal, after you driving away from the gate over 5m or close off your car engine, the gate will be closed automatically.
- By RF remote control, the user can press the remote control buttons to operate the gate opener.

-12-