



DIY Gate Frames

Assembly Instructions

Tools Required

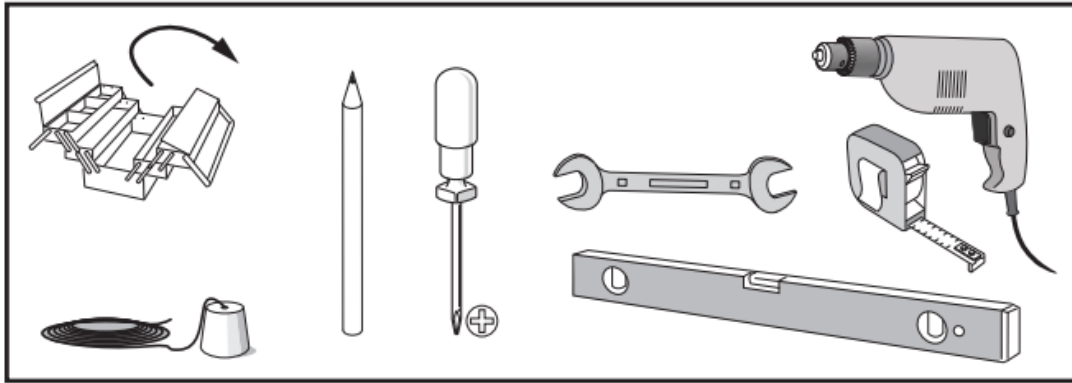


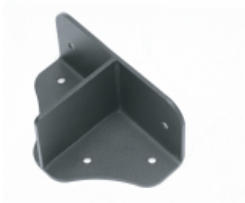
NOTE: Posts and wood are NOT INCLUDED. You must provide the wood to match your fence application.

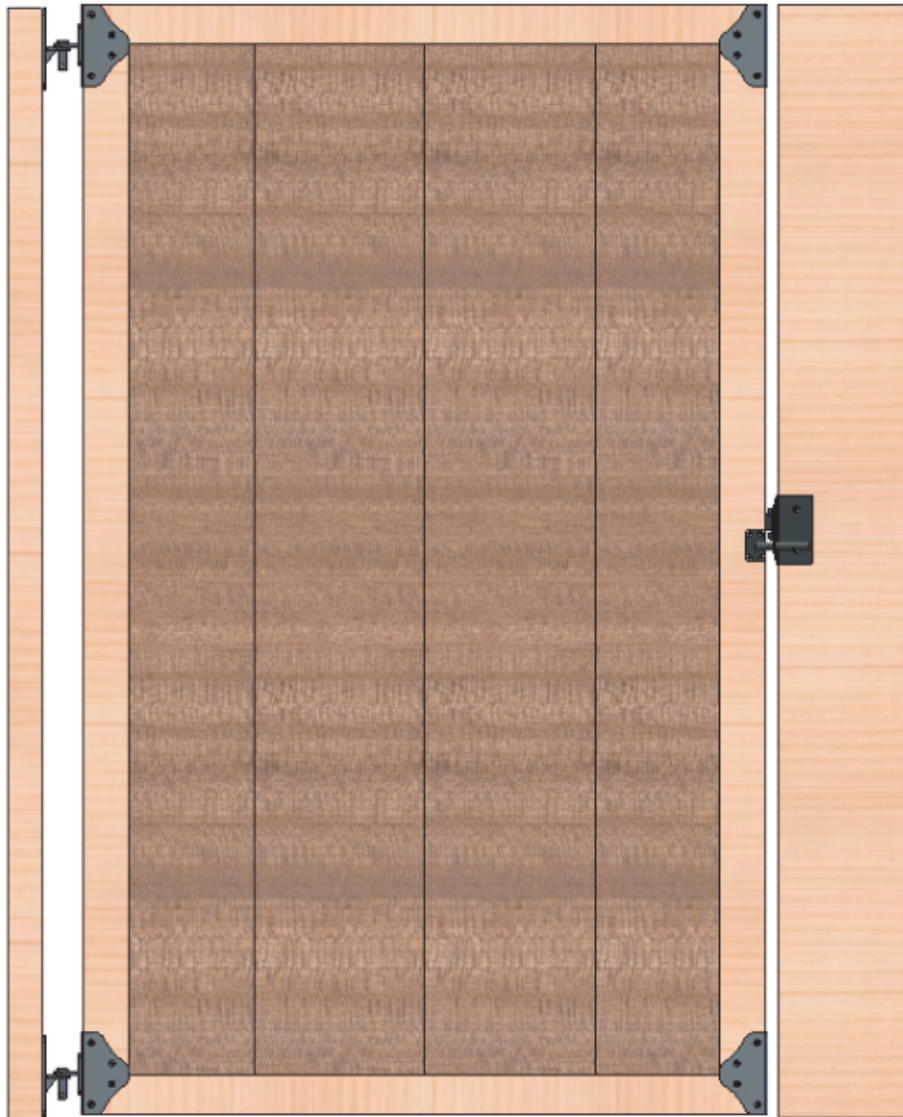



Fits gates 1m to 3m length, up to 1m to 3m tall
 Total wood weight: ≤ 50KGS

Part List (Single Gate)


Item	Image	Number	Quantity
Gate frame bracket with hinge		①	2
External fixed bracket		②	2

Gate latch kit		③	1
Lock bracket		④	1
Round head wood screws		⑤	10
Flat head wood screws		⑥	32


Installation instruction

Step 1. Determine the size of the fixed frame and insert the four brackets into the inner and outer wood plates in turn.


(W x H: 50 x 60mm)

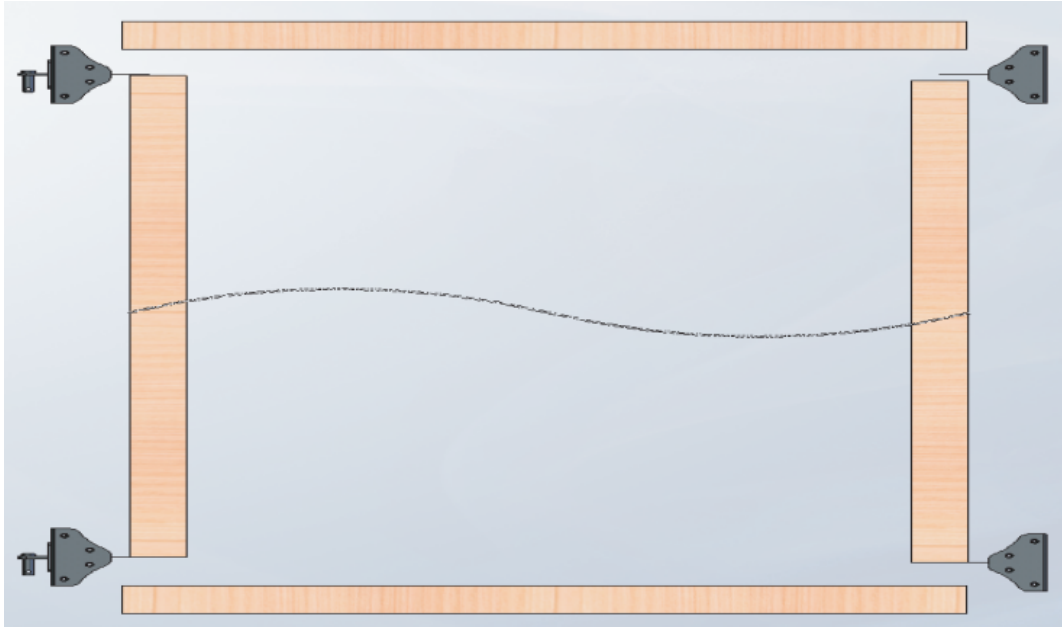


Step 2. Determine the position and tighten the flat head wood screws at the four brackets.

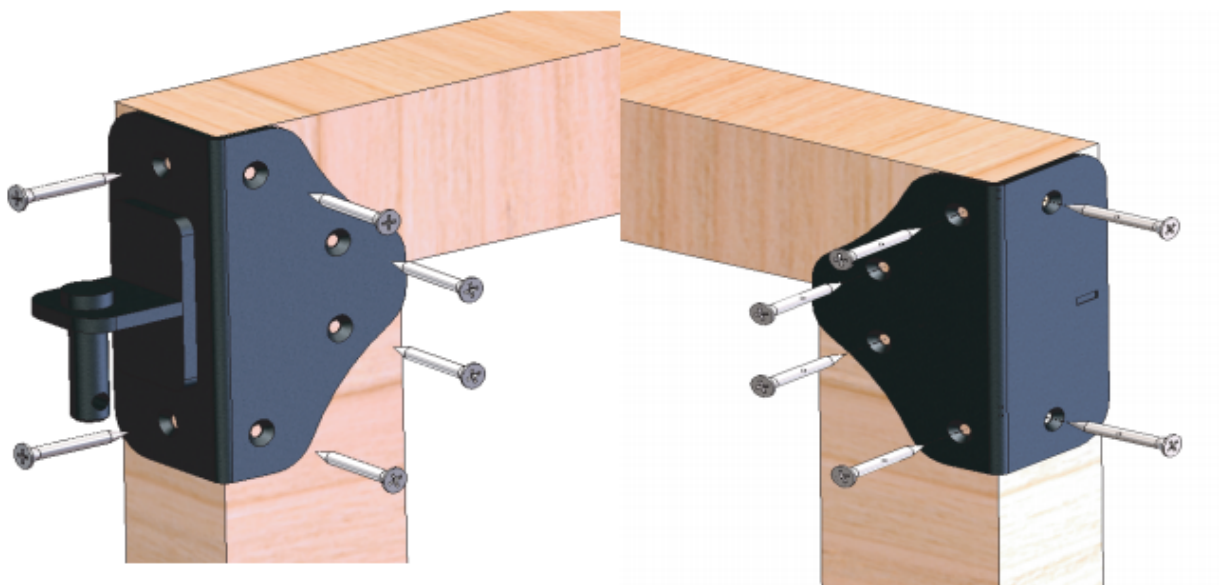


Step 3. Install the gate frame and tighten the screws.

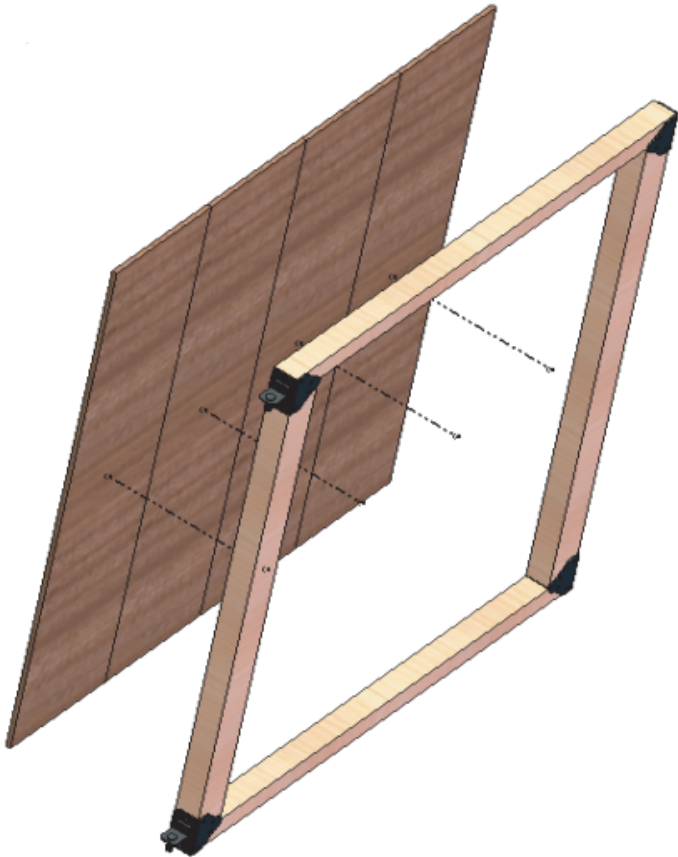



Step 4 . Measure the gate frame to determine the hinge height, and tighten the flat head wood screws to fixed the gate hinges on the gate post.

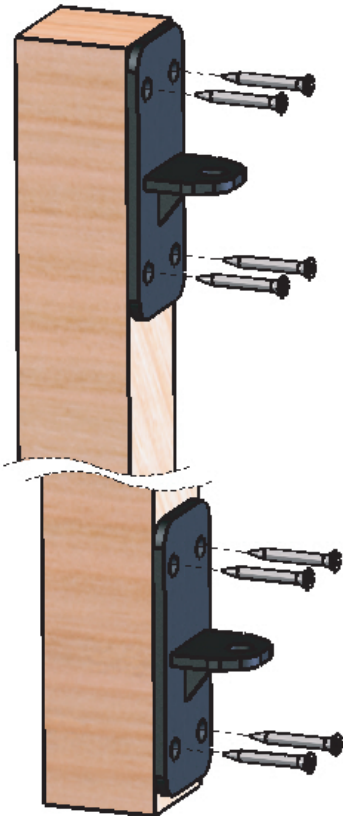


Step 5. Align the axes of the upper and bottom fixed inner brackets with the hinge holes on the gate post and install them.

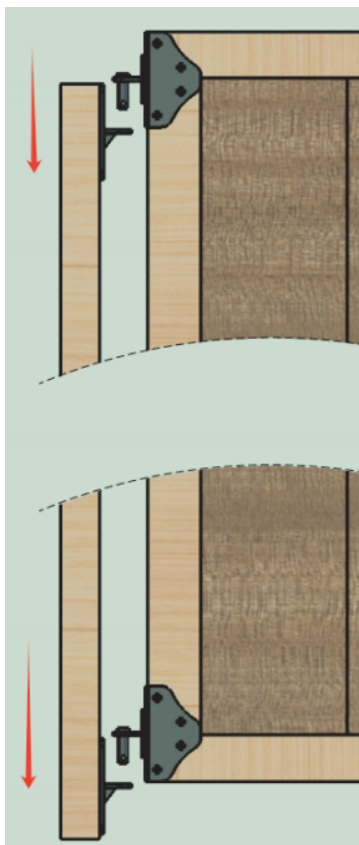

Step 6. Attach the gate latch kit to the inside gate post at the desired height use the round head wood screws.

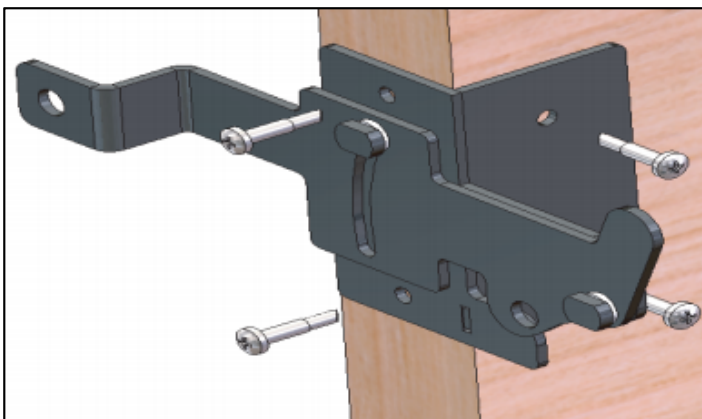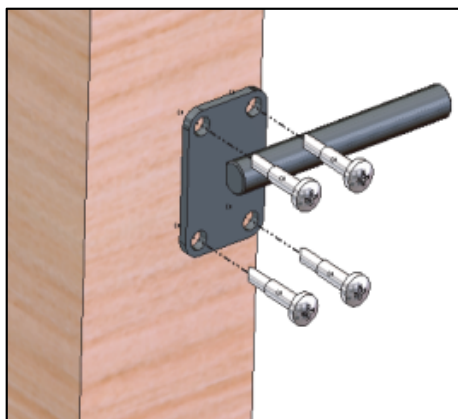

Step 7. We also provide a lock bracket (working with gate latch), if need, you can install it with round head wood screws on the gate so that users can add a lock.

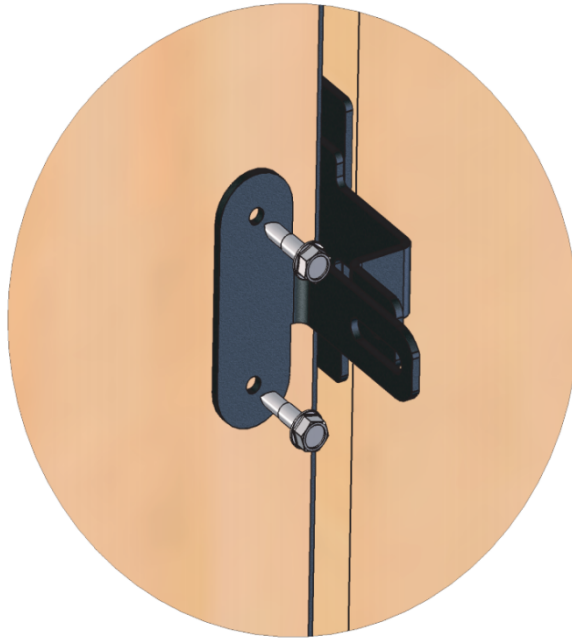

Step 8. Installation is completed.

